



4-3) RHD

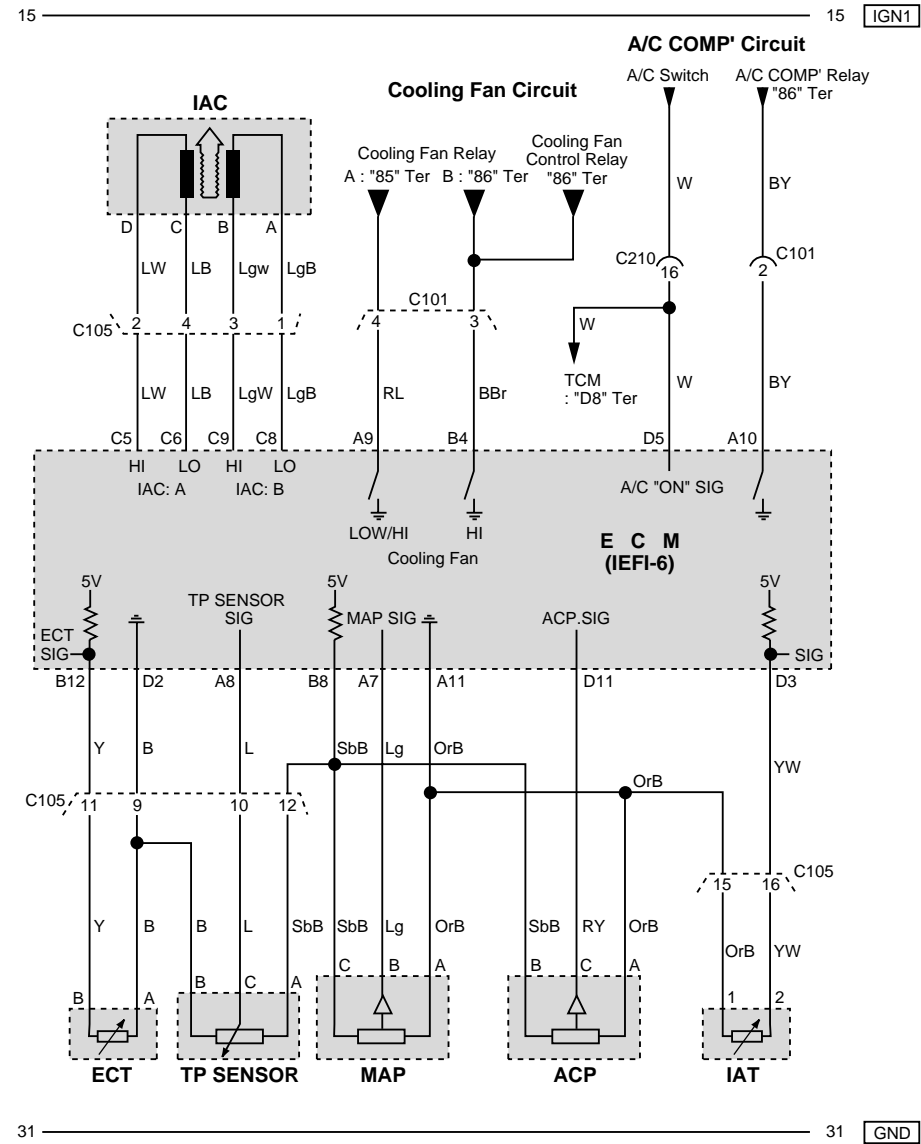

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(8PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C210(20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

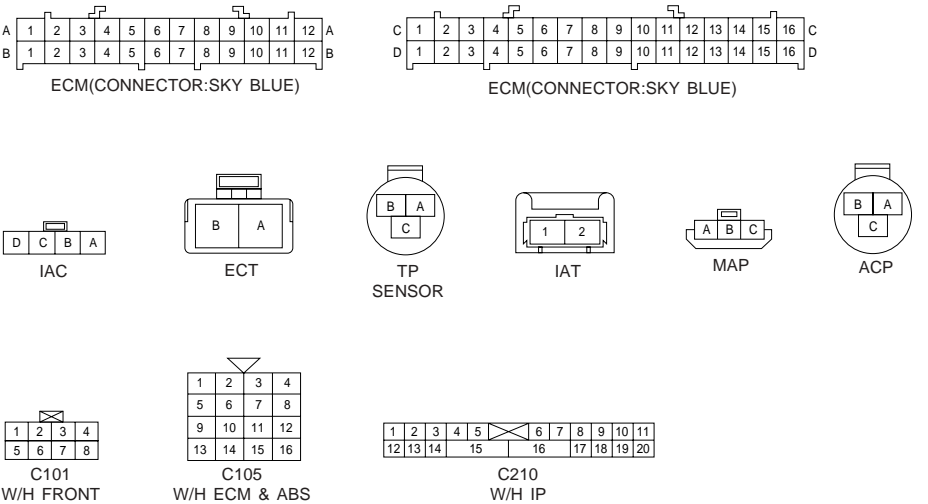




c. POSITION OF CONNECTORS AND GROUNDS

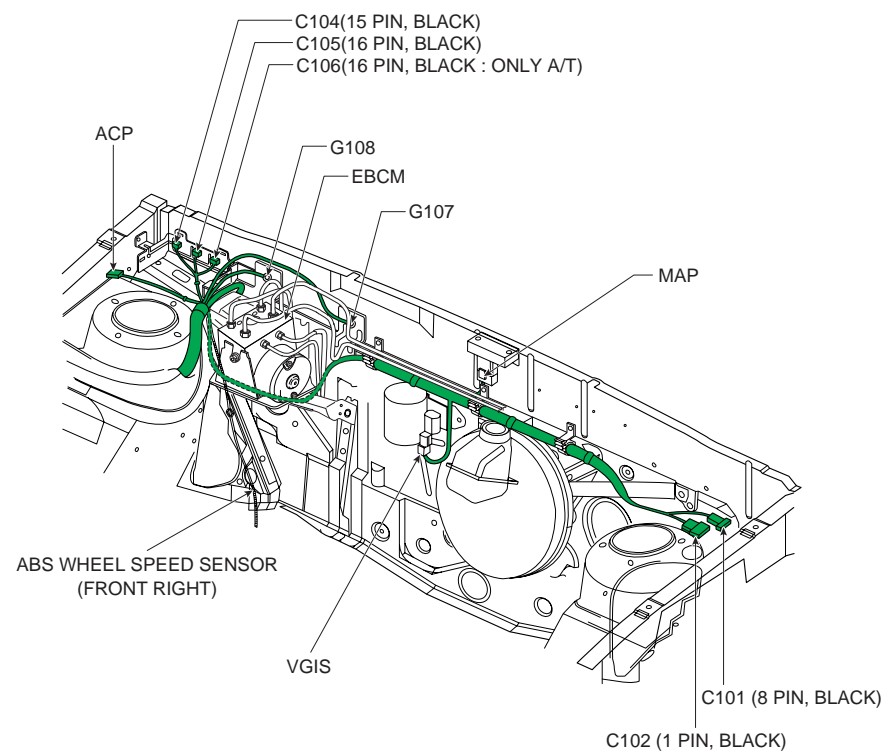
• ENGINE ROOM INSIDE

 W/H ECM & ABS


• PASSENGER ROOM RIGHT SIDE PANEL

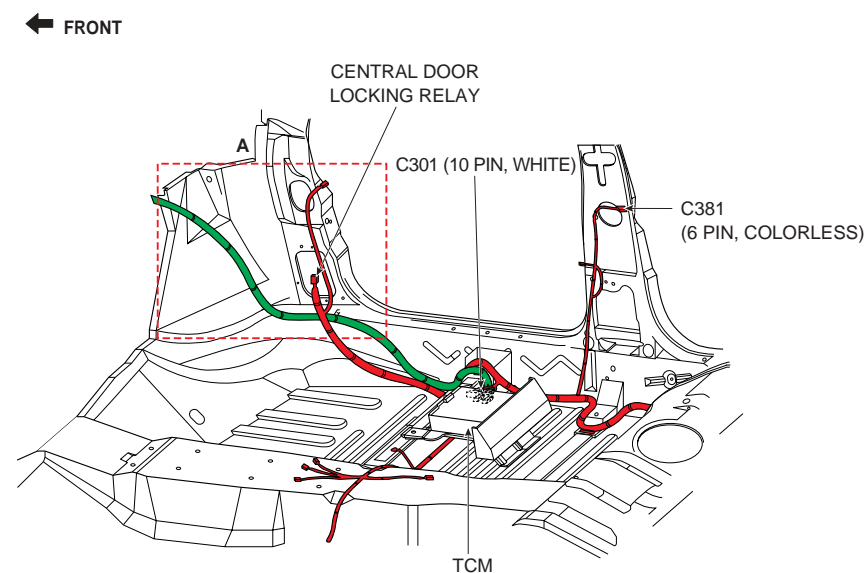 W/H FLOOR
 W/H ECM & ABS


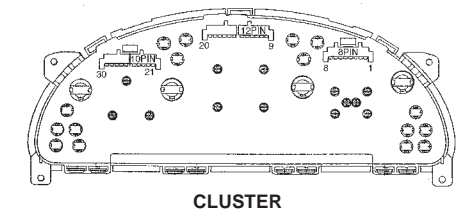
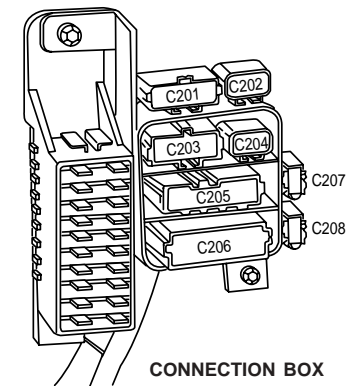
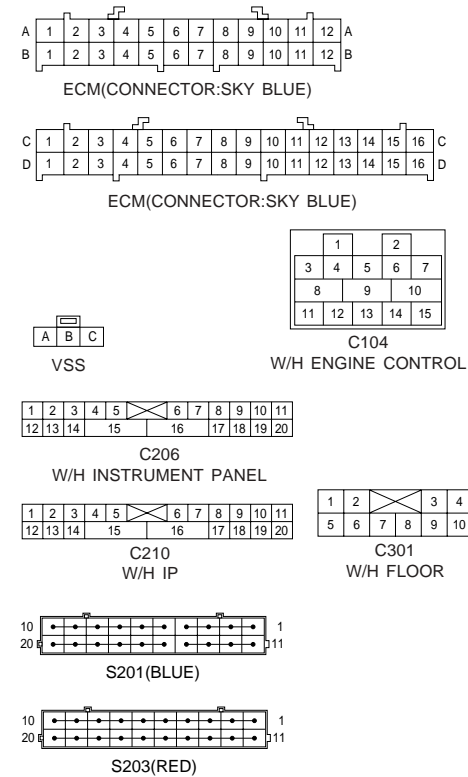
5) EGR, CCCP, VGIS, VSS CIRCUIT (ONLY M/T) - IEFI-6

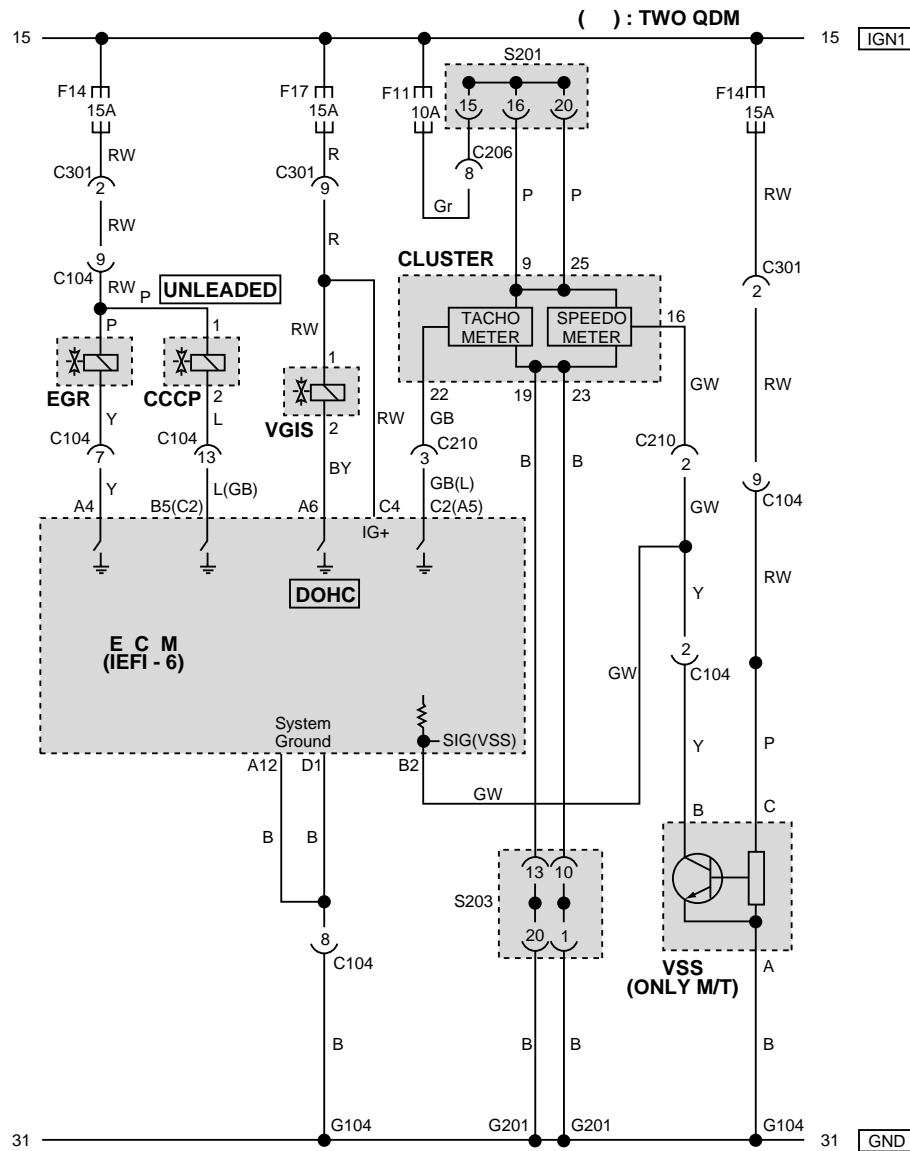

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C206(20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
S201(20PIN, BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
G104	Ground	Intake Manifold '4' Cylinder
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

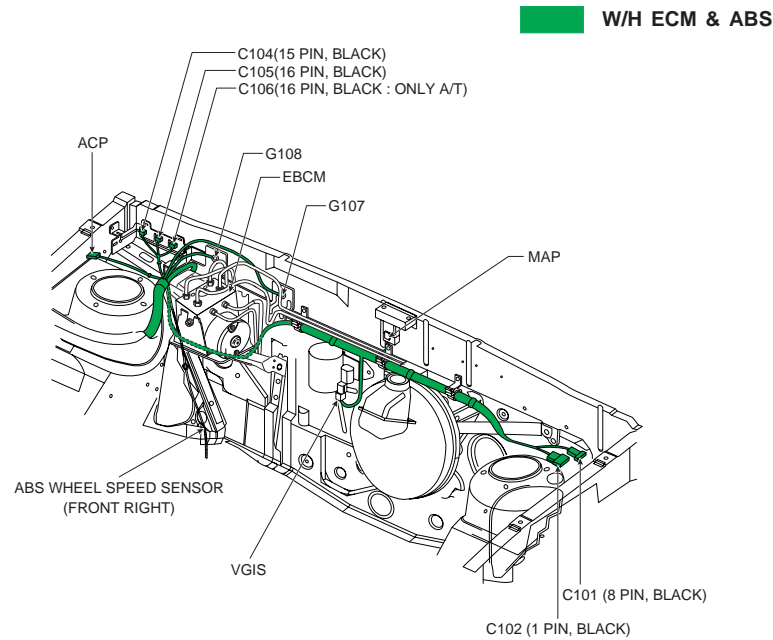


• PASSENGER ROOM RIGHT SIDE PANEL

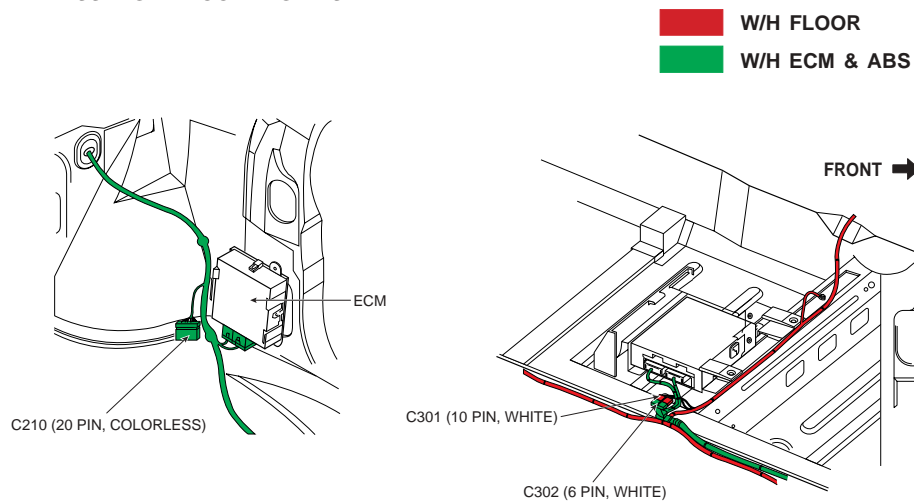


d. SPLICE PACK


S201(BLUE) - LHD

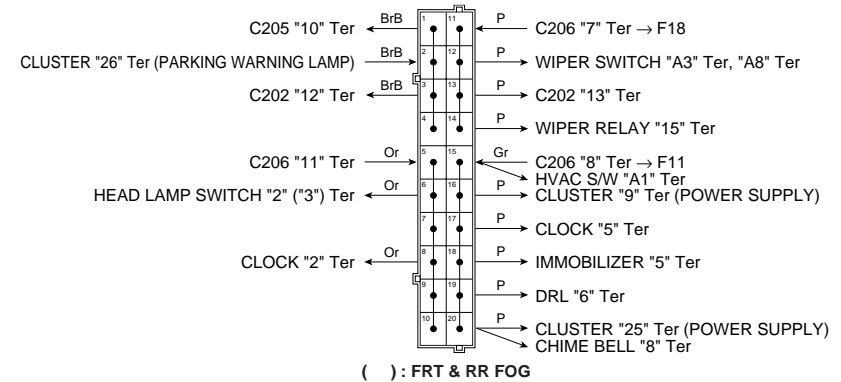

S203(RED) - LHD

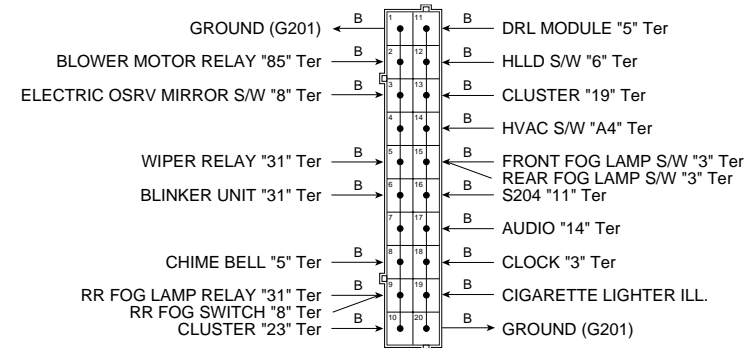


6) EGR, CCCP, VGIS, VSS CIRCUIT (ONLY A/T) - IEFI-6

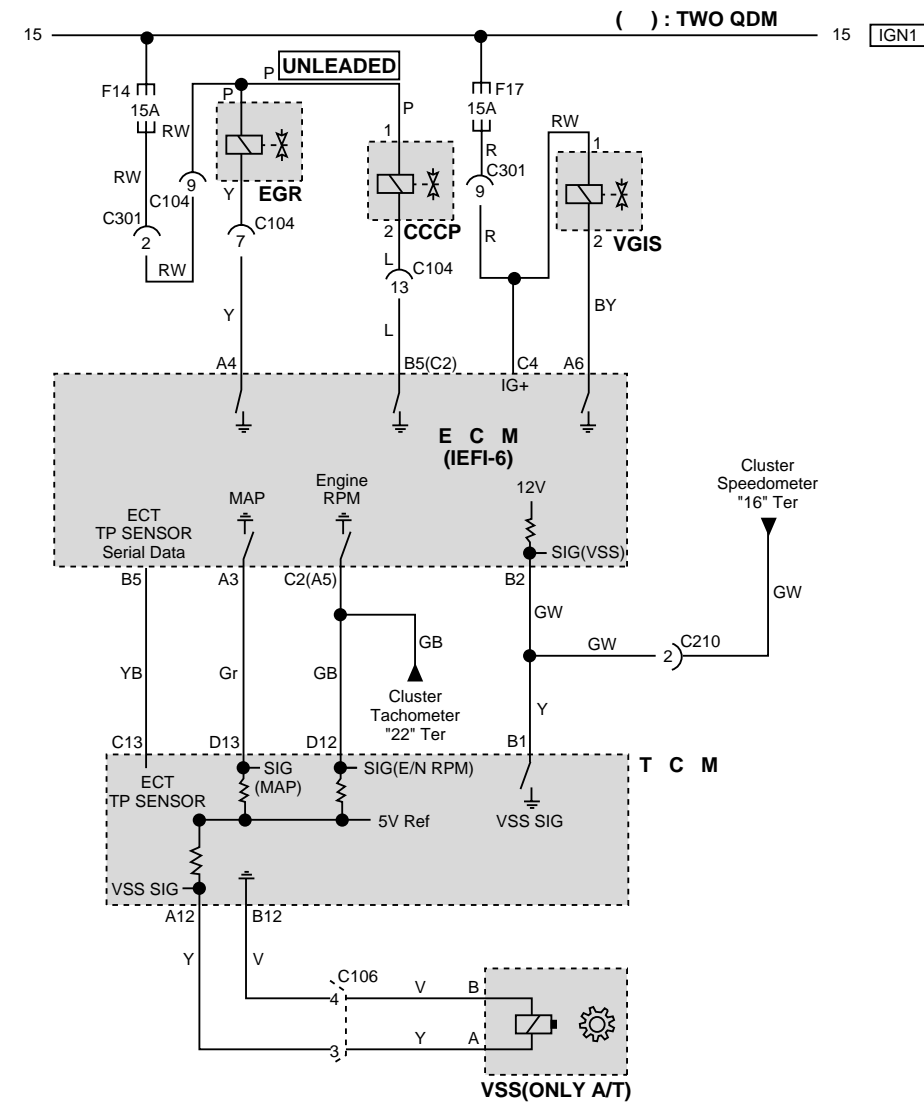


a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C106 (16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C210 (20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
C301 (10PIN, WHITE)	W/H ECM & ABS -Floor	Below Co-Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




ECM(CONNECTOR:SKY BLUE)




ECM(CONNECTOR:SKY BLUE)




TCM(CONNECTOR: PINK)




TCM(CONNECTOR: PINK)




C104
W/H ENGINE CONTROL



C106
W/H ENGINE CONTROL




C210
W/H IP




C301
W/H FLOOR

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

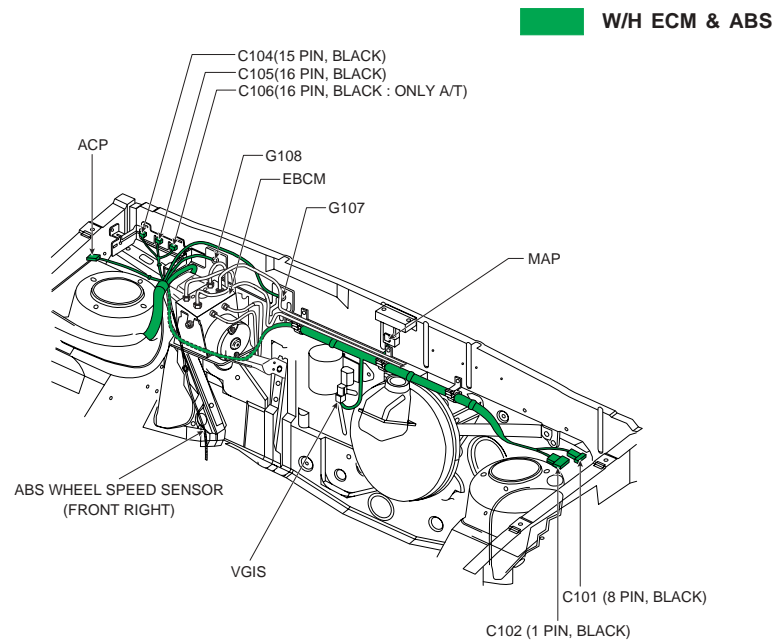


• FLOOR PANEL

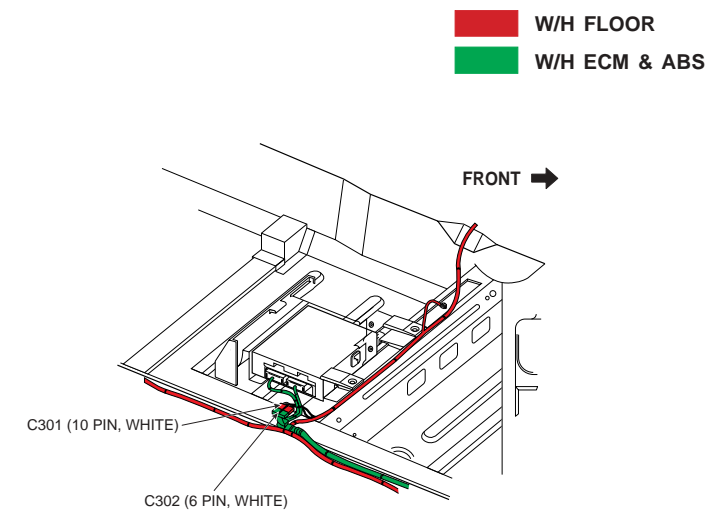

• PASSENGER ROOM RIGHT SIDE PANEL

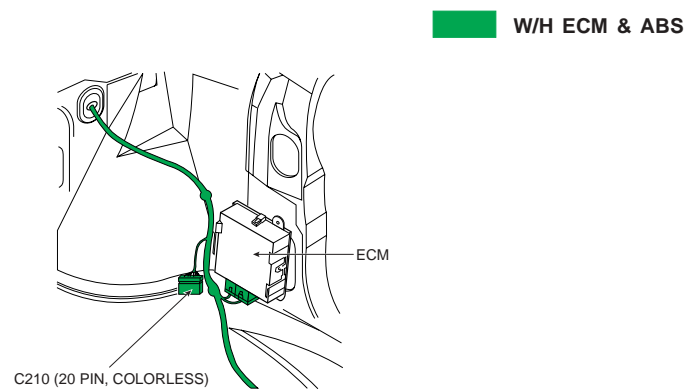


7) MIL LAMP, PNP SWITCH, DLC CONNECTOR CIRCUIT - IEFI-6 (LHD)

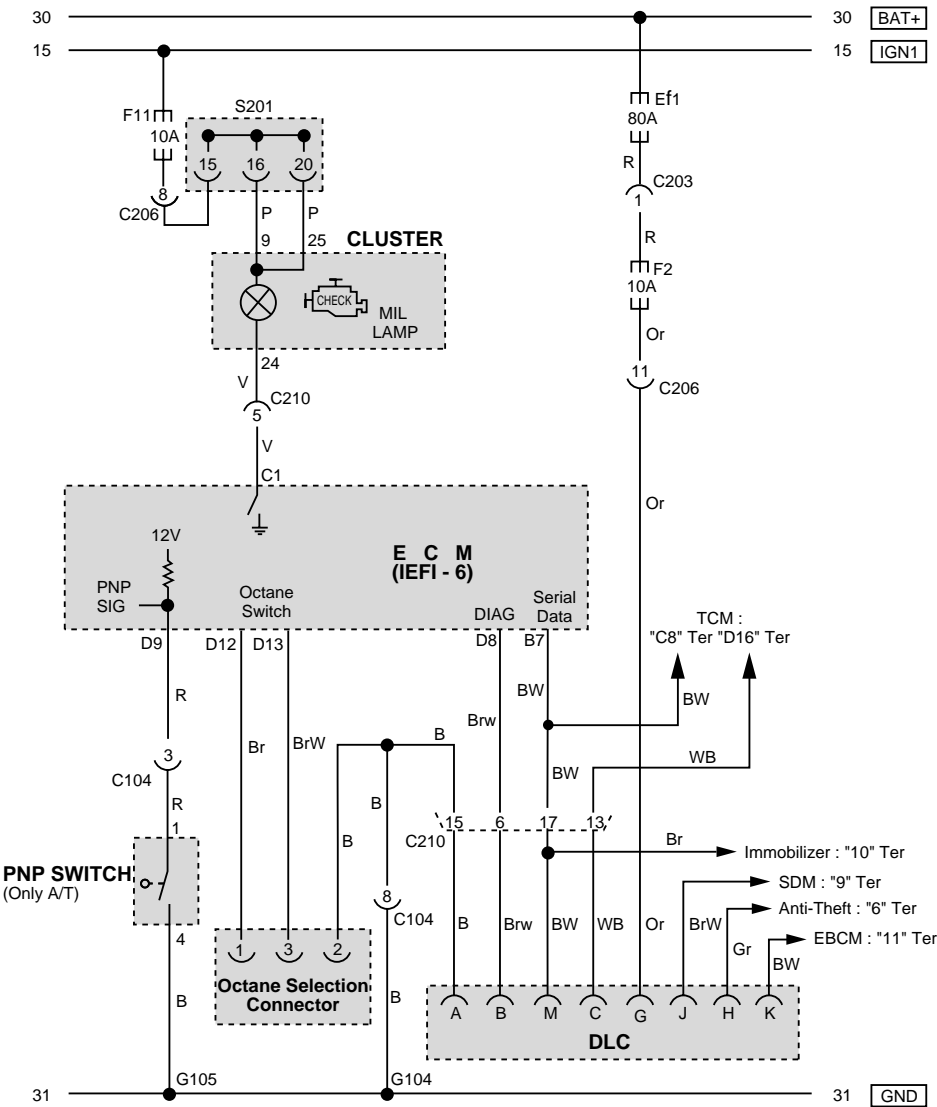

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN. BLACK)	W/H ECM & ABS -Engine Control	Behind Right Strut Mouning
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Realy Box
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Mousing

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

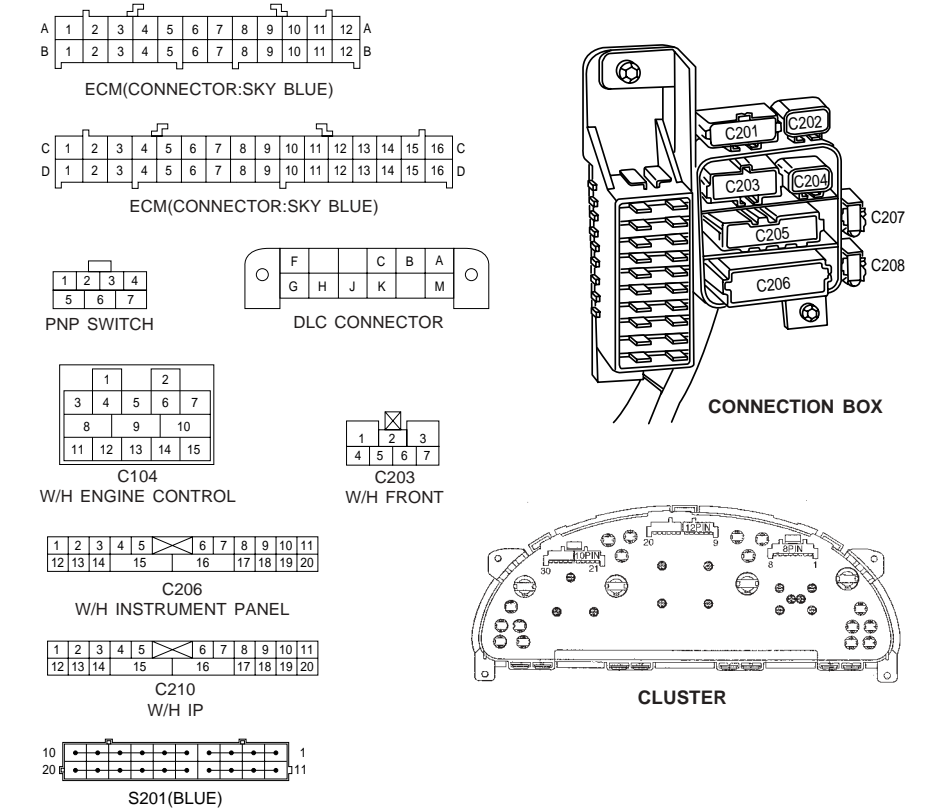


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

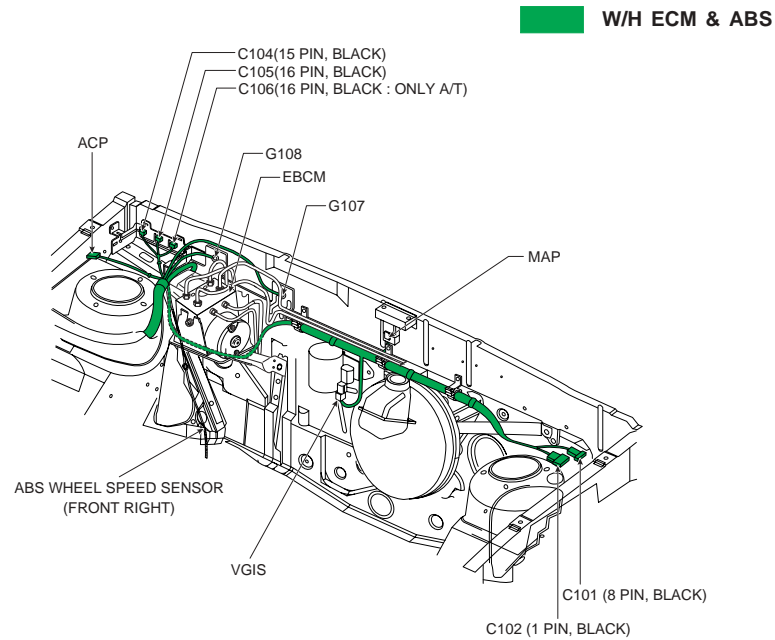


• PASSENGER ROOM RIGHT SIDE PANEL

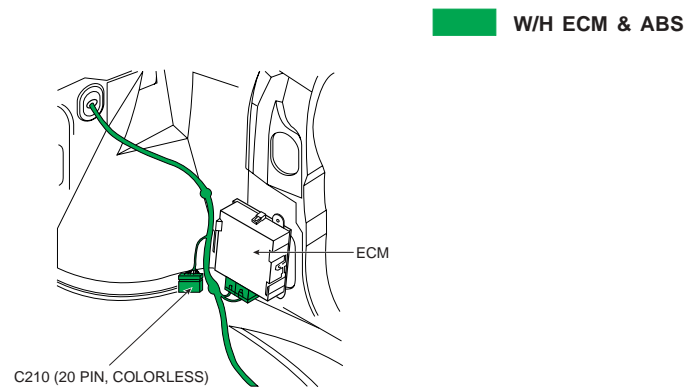


d. SPLICE PACK

S201(BLUE) - LHD

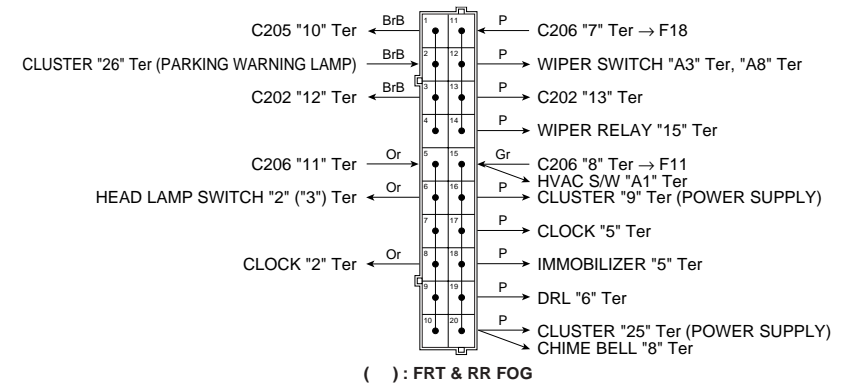


8) MIL, PNP SWITCH, DLC CONNECTOR CIRCUIT - IEFI-6 (RHD)

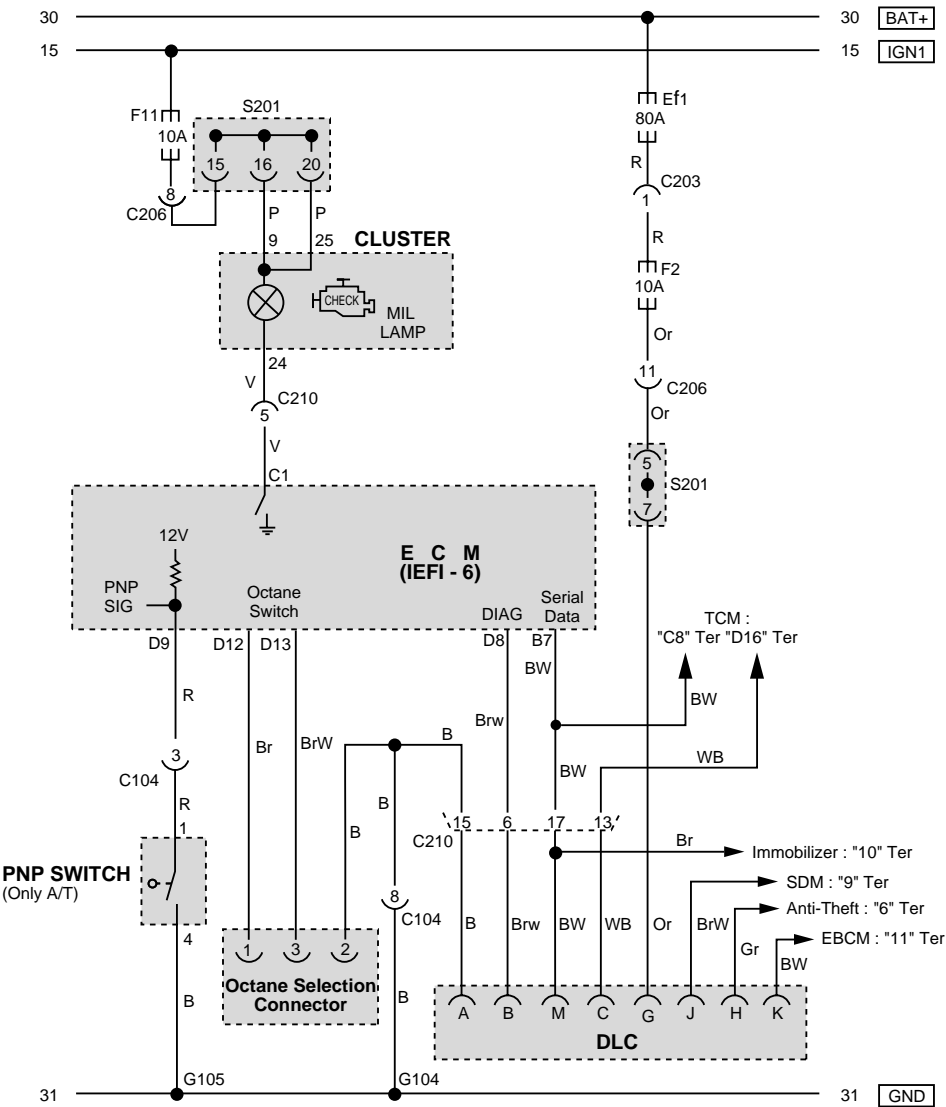

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN. BLACK)	W/H ECM & ABS -Engine Control	Behind Right Strut Mousing
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Realy Box
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Mousing

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

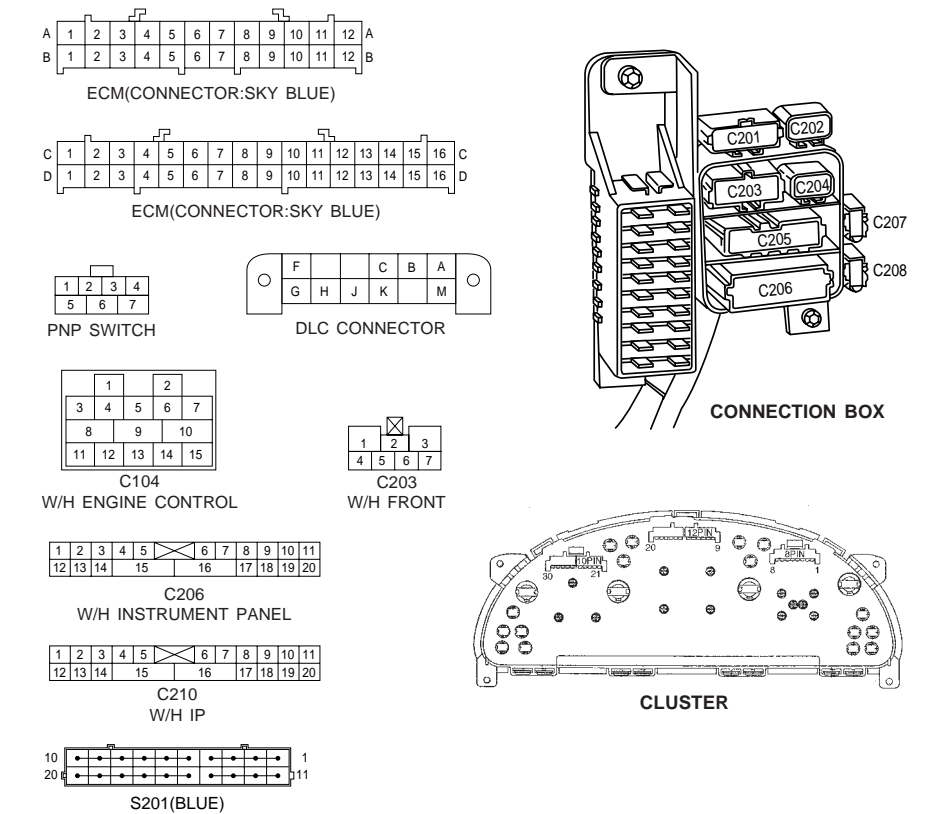


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

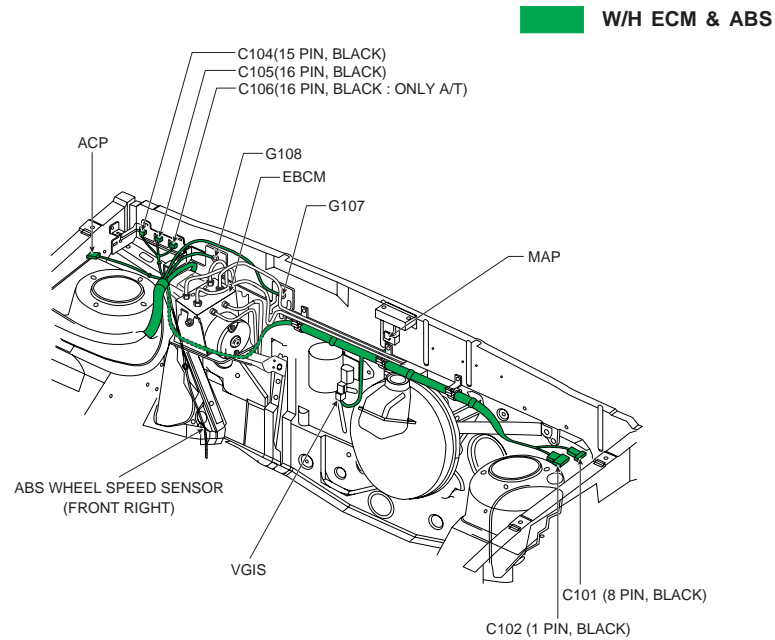

• PASSENGER ROOM RIGHT SIDE PANEL

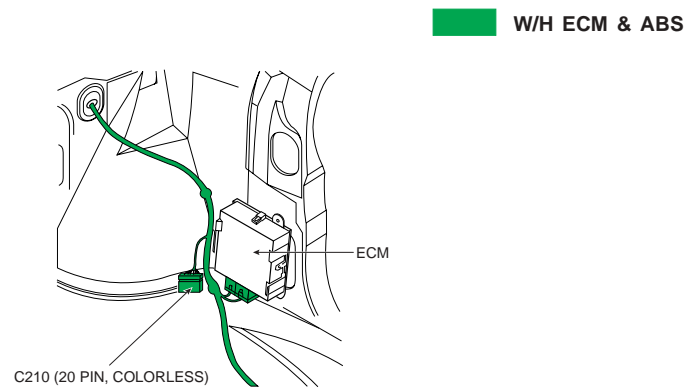

d. SPLICE PACK

S201(BLUE) - RHD

